

# PAC Enclosures Installation Guide



## 10082 Six-way lockable DIN rail enclosure

(Document 18003/3.00 February 2022)

All equipment should be installed in a safe location whilst remaining accessible for competent service personnel. It is the responsibility of the competent and trained personnel to observe appropriate precautions when handling, lifting or installing heavy loads that require wall mounting.

- Equipment not within a lockable enclosure should be located within an area of restricted access to competent personnel only.



**Use appropriate wall fixings to secure the enclosure to the wall.**

The wall mounting holes are indicated by the four arrows shown below.

*Dimensions: 30.12 (h) × 23.03 (w) × 3.94 (d) in. (765 × 580 × 100 mm)*



1. The enclosure should be located in a dry environment, mounted vertically on a flat wall.
2. Open the enclosure (unlock with the key provided if necessary).  
DO NOT attempt to remove the cover.
3. Remove any required knock-outs from the enclosure sides for cable entry, before fixing to a wall.



**Creating additional holes in the enclosure may cause metal shards from the drilling that can cause damage to the enclosed equipment.**

4. Use the enclosure as a template to mark the four wall mounting holes before drilling.