

CCL-K Series

Keypad Access

- Operating voltage 12Vdc
- Stainless Steel
- Surface or flush mounted
- Allows up to 40 user codes
- 0-99 relay timer
- Backlit



WEATHER RESISTANT
- IP 65 -



VANDAL RESISTANT



STAINLESS STEEL





CCL-1KS

- Surface mount



CCL-1K

- Flush mount

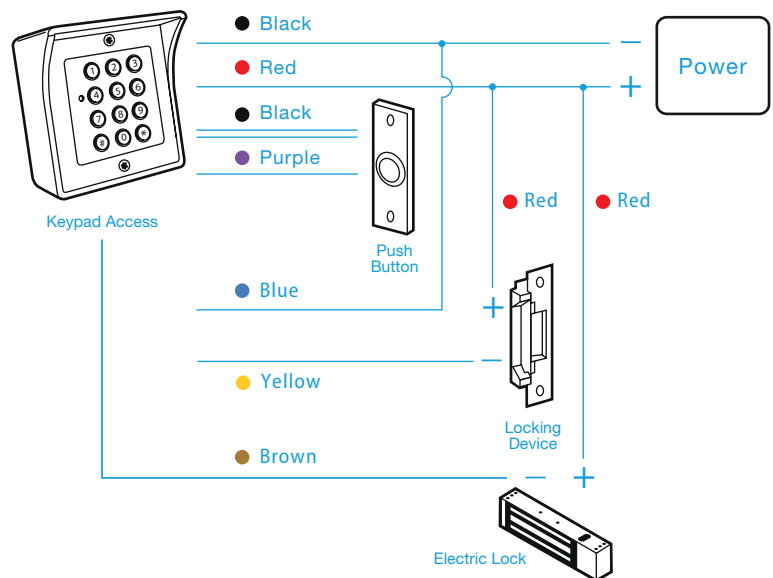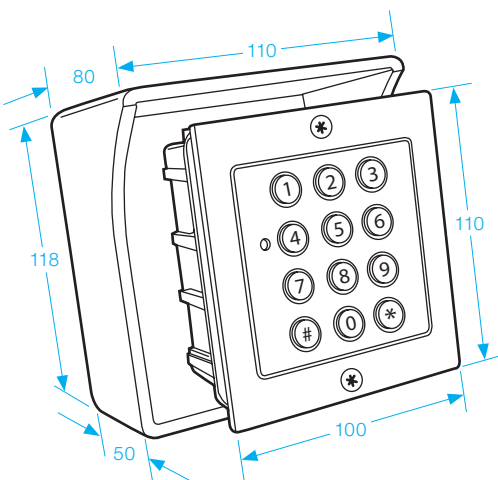

Operation manual for password access control



⚠ Notice

1. The original factory defaulted programming password is 1234.
2. In the programming mode, set 40 groups of 4-digit codes for door open.

Set programming code

1. Switch off the power, press * and hold, switch on the power. After hearing a long sound, release *.
2. After the long sound stops, another sound is heard, now you can enter the new 4-digit programming password.
3. After entering the new password, a "DI" sound can be heard for 5 times.

Enter to the programming mode

1. Press *, "DI" sound should be heard twice, and then enter 4-digit programming password, "DI" sound should be heard three times with LED light flashing. It indicates entering to the programming mode successfully.
2. Press * to exit the programming mode with "DI" sound in five times.

Set unlocked time

Factory default setting is 5 seconds.

1. Enter to the programming mode first.
2. Enter code 00, and "DI" sound should be heard twice.
3. Enter the targeted unlocked time: 2 digits (01 - 99 seconds); 00 is not valid in this mode.
4. After "DI" sound is heard for three times, it will return to programming mode.
5. Press * to exit the programming mode.

Add user passwords

1. Enter to the programming mode first.
2. Enter position 01- 30 (31-40 can not set unlocked time as they are normal open/closed).
3. Enter 4-digit password. If long "DI" sound is heard twice, it indicates password stored fails, and this password exists somewhere else. If "DI" sound is heard for three times, it indicates password stored succeeds. Return to the programming mode.

Delete user passwords

1. Enter to the programming mode first.
2. Enter position 01 - 30.
3. Press # to delete the password stored in 01- 30.
4. After "DI" sound is heard for three times, return to the programming mode.

Delete user passwords directly

1. Enter to the programming mode first.
2. Press #. After "DI" sound is heard twice, then enter 4-digits password for deletion.
3. After "DI" sound is heard for three times, it indicates the password has been deleted and return to the programming mode.

Delete all settings

1. Enter to the programming mode first.
2. Press #. After "DI" sound is heard twice, press # again. Another "DI" sound is heard twice.
3. Then, press # for seven times, the system deletes all the setting. The unlocked time changes to 1 second, and the programming password does not change. After hearing "DI" sound for five times, the system reset, and all the user passwords are deleted.